

# Auto Airconditioner Dryer (EN)



## • Specification

Operating voltage: DC 12V ( $\pm 3V$ )

Operating Current: Standby Current 10mA; Max Current 4A

Operating temperature:  $-20^{\circ}$  to  $70^{\circ}$



Product Size: 105 X 75 X 35 (mm)

Product weight: 100g

## • Features

When the vehicle is turned off, it automatically operates the fan after a certain period of time to dry the remaining moisture after using the air conditioner, thereby dramatically reducing fungal and bacterial growth

## • Parts Name

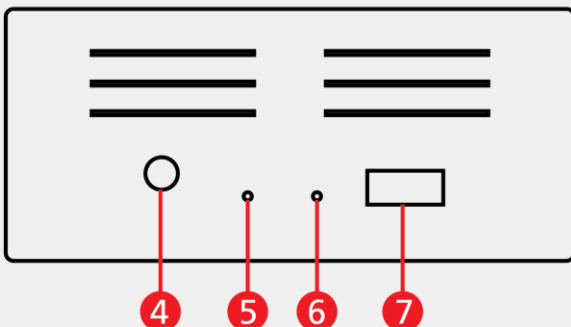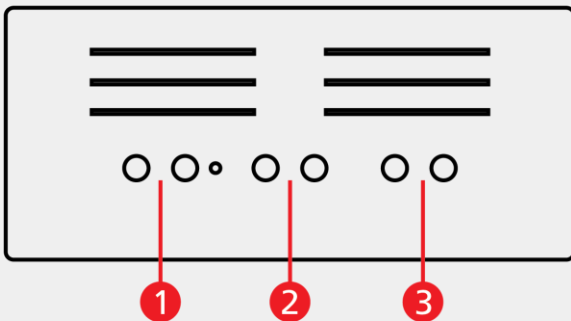

- ① Product power input
- ② Blower motor input
- ③ Blower motor output
- ④ Voltage sensing switch
- ⑤ Product status LED
- ⑥ Product power LED
- ⑦ Product On/Off switch

# • Product Composition



- ① Auto Airconditioner Dryer product body
- ② 1.5m extended wiring
- ③ Double-sided tape for fixing X 1
- ④ Cable ties X 3
- ⑤ User's Guide


# • Product installation and operation



① Remove OEM blower motor connector



② Connect both sides of product connector

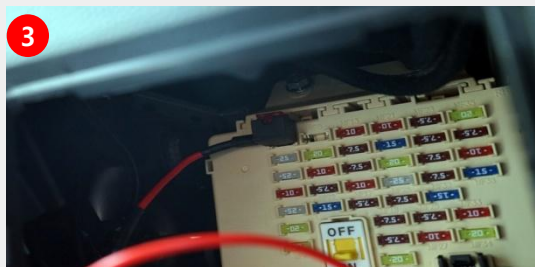

③ Always connect (+) from fuse box



④ Connect ACC depending on the vehicle (optional)  
/ cigar lighter, ACC, power outlet



⑤ Connect the ground to the body bolts



⑥ Switch product On!  
Complete!

1. **More than 10 seconds and Less than 5 minutes driving condition (check for clean operation)**  
Startup OFF → 10 seconds later, 5 seconds of clean operation → "Beep ~" End
2. **More than 5 minutes and Less than 30 minutes driving condition**  
Startup OFF → 1 buzzer alarm → 10 seconds later, 5 seconds of clean operation → 1minute later 30 seconds of clean operation (3 times) → "Beep ~" end
3. **More than 30 minutes driving condition**  
Startup OFF → buzzer alarm twice → 5 seconds later, 10 seconds of clean operation → 1minute later, 30 seconds of clean operation (5 times) → "Beep ~" end
4. **Detecting KEY ON during clean operation**  
KEY ON → "Beep ~" Exit
5. **How to stop functioning when landfill**  
KEY ON → KEY OFF (Repeat 3 times in 5 seconds) → "Beep ~" stop the function
6. **How to activate the function in the product landfill**  
KEY ON → KEY OFF (repeat 3 times in 5 seconds) → "Beep – Beep" activate the function
7. **How to set the low voltage detection switch**  
Switch ON → "Beep –" 11.8V → "Beep – Beep –" 12.0V → "Beep – Beep – Beep –" 12.2V

# • Cautions

- Do not drop the product or subject it to physical shocks
- Since this product is not a waterproof product, do not install it in a place exposed to water
- DC 12V only product. Do not use for 24V cargo and truck
- Please be careful when connecting the product at all times
- The input and output of the product must be distinguished and connected
- Be sure to insulate unused wiring with tape
- Be sure to remove the car key before installing
- Avoid places where the temperature is high
- All procedures for installing this unit should be performed by trained personnel



RM #404 4TH FLOOR, B-DONG,  
WOORIMLIONSVALLY, 371-28, GASAN-DONG,  
GEUMCHEON-GU, SEOUL, KOREA.

TEL : 82-2-868-3627~9 | FAX : 82-2-2026-5987